



 
HERKULES PLUS

Instrukcja montażu
Installation instruction
Инструкция монтажа

2(4)x25kg



tel. 22 818 77 22

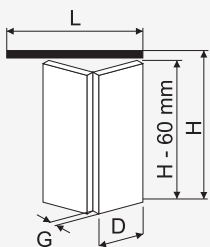

$D \leq 600\text{mm}$ $G = 16 - 40\text{mm}$



G [mm]	16	18	22	25	28	32	40
x	2	2	3	3	4	4	6

2 A

 


$$D[\text{mm}] = \frac{L[\text{mm}] - x - 5}{2}$$

2 B



$$D[\text{mm}] = \frac{L[\text{mm}] - 2x - 8}{4}$$

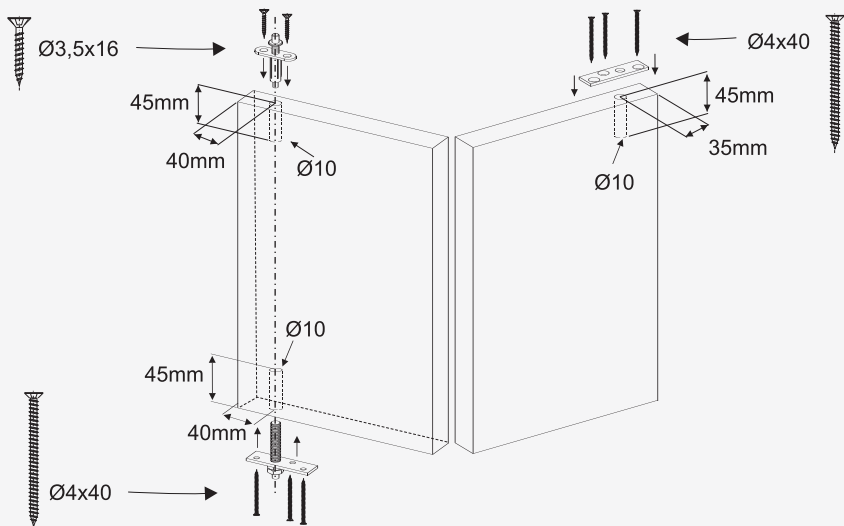



3




4 A



  
4 B

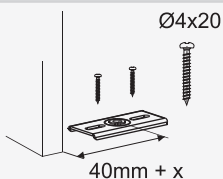



5

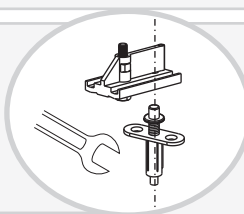 

7

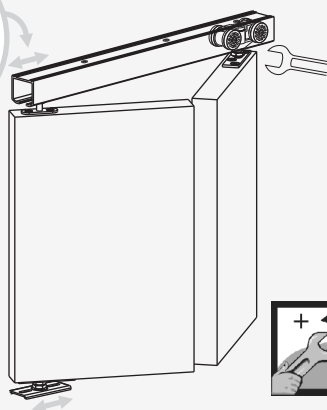 

6

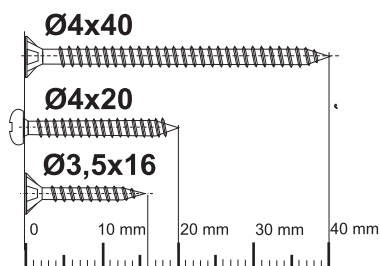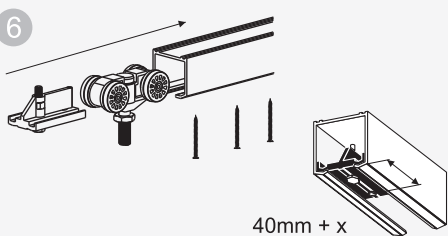  

1:1



 
HERKULES PLUS

Instrukcja montażu
Installation instruction
Инструкция монтажа

2(4)x40kg



tel. 22 818 77 22

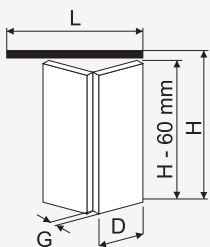

$D \leq 750\text{mm}$ $G = 16 - 40\text{mm}$



G [mm]	16	18	22	25	28	32	40
x	2	2	3	3	4	4	6

2 A

 


$$D[\text{mm}] = \frac{L[\text{mm}] - x - 5}{2}$$

2 B



$$D[\text{mm}] = \frac{L[\text{mm}] - 2x - 8}{4}$$

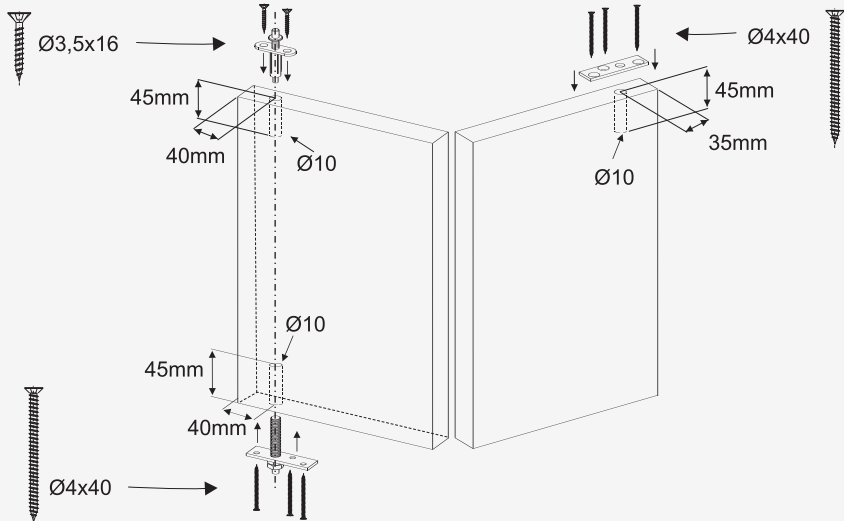




3




4 A



  
 
4 B

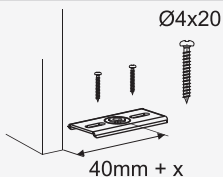

5

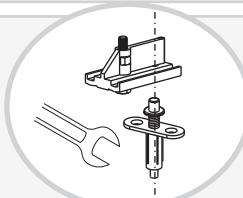 

7

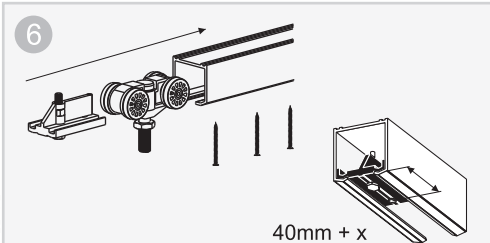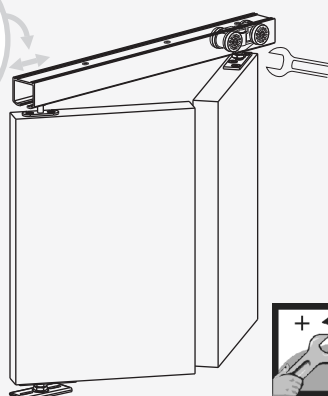  


6

40mm + x

Ø4x40

Ø4x20

 Ø3,5x16

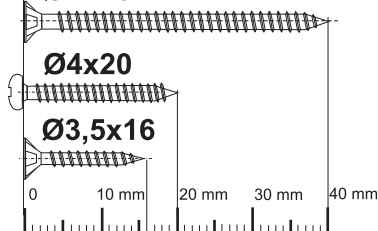

1:1