
miniK 10


unique electronic cam lock


cabinets • lockers • boxes

INSTALLATION

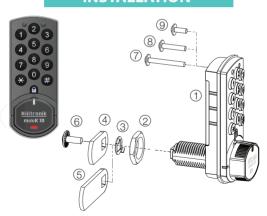


Installation Overview

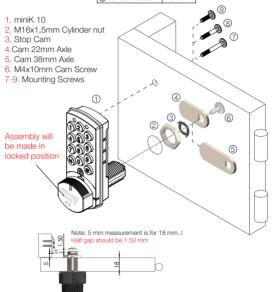

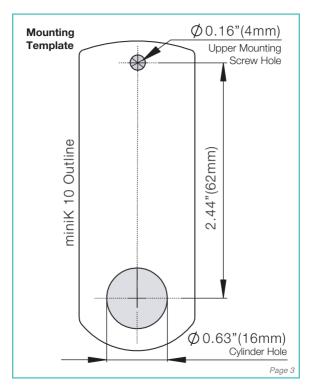

Mounting on Left & Right Door

RIGHT

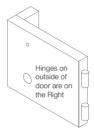

LEFT



Peg on stop cam is on the right side



Back View Knob, rotates to the right to open lock




View of the lock in closed position

Peg on stop cam
is on the left side




Back View
Knob, rotates to the left to open lock


JOINT ERECT LOCK ASSEMBLY MEASUREMENTS

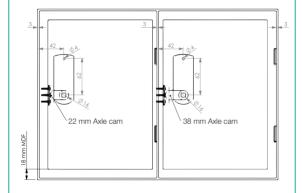


RECESSED COVER ASSEMBLY MEASUREMENTS

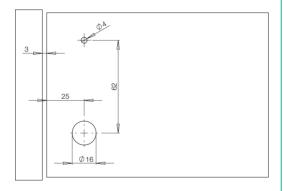


OVERLAPPING / EXTERNAL COVER ASSEMBLY MEASUREMENTS

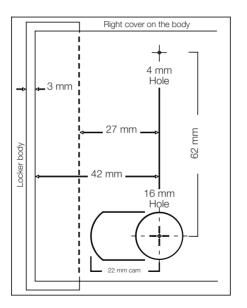

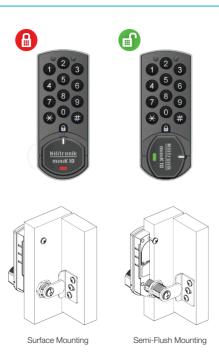

Page 8

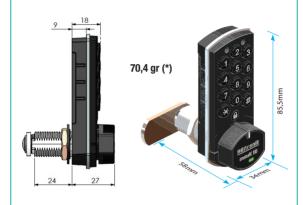

* Assembly set is not.

NOTE: Read instructions, set combination and test lock BEFORE installing!

Replacing existing lock:

- Place mounting template centered on existing hole and mark upper mounting screw hole.
- 2. Drill mounting screw hole.
- 3. Install lock using adaptor if necessary.
- 4. Thread nut on cylinder.
- 5. Install mounting screw
- 6. Tighten both nut and mounting screw.
- 7. Test operation of lock

New Install:

- Place mounting template on door and mark upper mounting screw hole and lower cylinder hole
- 2. Drill mounting screw hole and cylinder holes.
- 3. Continue steps 4-7 above

Note: Before drilling holes, make sure miniK 10 is positioned with proper clearance for cam to work.

MiniK10 is supplied without striker plates which are supplied as optional at additional cost if specifically requested and included in customer's confirmation purchase order



WARNINGS FOR MOUNTING:

- Pull the transparent "Remove to Start" tag coming out of battery cap at the back of the lock and activate the lock.
- Read the user manual and apply password change and opening/closing operations several times before the mounting of the lock
- Before mounting of the lock, switch lock handle to closing position.
- Make sure that there is no friction in the cabinet lids. If there is a friction in the cabinet lids, make the hinge adjustments and make the cabinet lid operable.
- Do not forget to place Stop Cam depending on the condition of the right or left lid of your cabinet.
- Do not over-tighten nuts or screws. The maximum torque on the cylinder screw is 2Nm.
- Ensure that there is no friction between strike plate and the cam.
- 8. Finally check the mounting screws, tighten the loose screws.
- When placing the existing locks into place, if the cylinder hole is big, use the adapter and do not over tighten the cylinder nut. (max. 2Nm).
- 10.Check the cabinet lid hinge adjustment at least once a year. Tighten loose screws.









Spa and Baths

In Mailboxe



eco-friendly



Sports Halls





